

# **SERIES 884 TIME CLOCK**

## **TWO CHANNEL SETTING INSTRUCTIONS**

<b>SET TIME AND DAY</b>	SLIDE SET SWITCH TO RUN, HOLD DOWN THE HOUR AND MINUTE BUTTONS SIMULTANEOUSLY FOR 2 TO 3 SECONDS, THE DISPLAY WILL STOP FLASHING, SET THE TIME OF DAY NOTING THE AM/PM DESIGNATIONS. SET THE DAY WITH THE 1...7 BUTTON.
<b>SET SWITCH ON CYCLE CHANNEL P1</b>	SLIDE SET SWITCH TO P1, A "1" BY THE 0.00 INDICATES THE P1 CHANNEL AND FIRST SWITCH CYCLE, A "BULB" INDICATES THE FIRST SWITCH-ON (CIRCUIT CLOSURES) PRESS 1...7 BUTTON UNTIL ARROWS POINT TO SELECTED DAY(S) FOR THIS CYCLE. PRESS h AND m BUTTONS TO SHOW SWITCH-ON TIME, NOTING THE AM/PM INDICATOR.
<b>SET SWITCH OFF CYCLE</b>	WITH SET SWITCH AT P1 PRESS P BUTTON, NOTE THE CHANNEL INDICATES P1 CHANNEL, A SWITCH CYCLE NUMBER CHANGES TO 2 AND THE BULB BLANKS, INDICATING SWITCH-OFF (CIRCUIT OPENS) PRESS 1...7 BUTTON TO MATCH DAY(S) SET FOR SWITCH CYCLE "1" PRESS h AND m BUTTON, SELECT SWITCH-OFF TIME. REPEAT STEPS UP TO 8 ON/OFF EVENTS.
<b>SET CHANNEL P2</b>	SLIDE SET SWITCH TO P2 A "2" BY THE FLASHING 0.00 INDICATES THE P2 CHANNEL AND 2ND SWITCH CYCLE. A BULB INDICATES THE FIRST ("1") SWITCH-ON. PROCEED TO SET SWITCH ON CYCLE/SWITCH OFF CYCLE OF P2 AS WAS DONE WITH P1.
<b>AUTO RUN MODE</b>	SET TIME, DAY AND DESIRED SWITCH CYCLES. SLIDE SET SWITCH TO RUN AND MODE SWITCH TO AUTO. SWITCHING BEGINS WITH NEXT SWITCH-ON SET TIME.
<b>OVERRIDE ON</b>	SLIDE MODE SWITCH TO 1. USING THE SKIP CYCLE, PRESS X BUTTON AND CHOOSE THE CHANNEL YOU WANT TO CONTROL. SWITCH REMAINS OPEN INDEFINITELY (CURRENT CLOSED).
<b>OVERRIDE OFF</b>	SLIDE MODE SWITCH TO 0 USING THE SKIP CYCLE, PRESS X BUTTON AND CHOOSE THE CHANNEL YOU WANT TO CONTROL. SWITCH REMAINS OFF INDEFINITELY (CIRCUIT OPENS).
<b>SKIP CYCLE</b>	IN AUTOMATIC RUN MODE, PRESS X BUTTON, THE NEXT CALENDAR DAY IS SKIPPED.
<b>SETTING ERROR</b>	IF EEE APPEARS, A SETTING ERROR EXISTS. THE SWITCH CYCLE NUMBER IN ERROR IS SHOWN. SLIDE SET SWITCH TO P. PRESS BUTTON UNTIL CYCLE IS SHOWN. REVIEW THIS AND FOLLOWING SETTING TO CORRECT ERROR. SLIDE SET SWITCH TO RUN.
<b>CLEAR ANY SETTING</b>	SLIDE SET SWITCH TO P1 OR P2, PRESS P BUTTON TO SHOW SWITCH CYCLE TO CLEAR. TO CLEAR, PRESS 1...7 BUTTON UNTIL NO DAYS ARE INDICATED, REPEAT FOR FOLLOWING SWITCH CYCLE. THIS ON/OFF CYCLE IS NOW INACTIVE.
<b>CLEAR ALL</b>	TO ERASE ALL SETTINGS, PRESS R.